

# **INSTALLATION MANUAL**



# Case IH 8.3L & 9.0L Common Rail Module

<b>Tractor Applications</b>
Magnum 215

Magnum 245 Magnum 275 Magnum 305 Magnum 335 Rapid Power Module Number

40621



# TABLE OF CONTENTS



#### **TROUBLESHOOTING:**

If you have questions during the installation of this product, please visit www.bullydog.com/Product\_Updates.php. The latest version of these instructions can be found at the same location. Technical support is available by calling 866-bullydog (866-285-5936).

### **TABLE OF CONTENTS**

INTRODUCTION	PG. 2
PARTS DESCRIPTIONS	PG. 3
MODULE INSTALLATION	PGS. 4-6
OPERATING INSTRUCTIONS	PG. 7
INTERNET UPDATE	PGS. 8-10

#### **INTRODUCTION**

You have just purchased the most technologically advanced tractor module available for the Case IH 8.3L & 9.0L Common Rail tractors. The Rapid Power module is the safest and longest lasting module on the market. The Rapid Power module also comes with free technical support and internet update ability, just call: 1-866-285-5936.

*This instruction set outlines how to install and operate the Rapid Power module on Case IH 8.3L* & *9.0L Common Rail tractors.* Always remember to remove the module from the tractor before taking it in for any kind of service as the module may interfere.

Bully Dog recommends installing a pyrometer gauge to monitor exhaust gas temperature when using any product to increase horsepower.

### **Product Description:**

The product is made up of two different parts, the module box, and cable.



**THE MODULE BOX**: The module box contains the electronics that will allow your tractor to produce more horsepower. It is very important that this module is mounted away from all moving or hot parts. The box should be placed in an area protected from dirt and moisture.



**THE CABLE:** This cable allows the Rapid Power Module to connect to your tractors engine. At the end of the wiring harness are four plugs, two male and two female plugs. These plugs will connect directly to the tractors engine and wiring harness requiring no modification of the tractor.



#### PRODUCT PLACEMENT OVERVIEW:




### **RPM INSTALLATION**

#### INSTALLATION INSTRUCTIONS:

**1.** Open Hood of Tractor, install module when engine is off and is cool.

**2.:** Place module below the air filter in a safe location and run cable along the wiring harness toward the top of the fuel rail.

**3.** Locate the Fuel Rail pressure sensor located on the fuel rail.

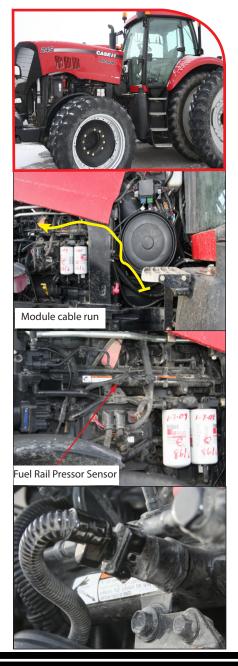


# **RPM INSTALLATION**

4. Remove stock pressure sensor male plug.



**5.** Plug the module male plug into the tractor fuel rail pressure sensor.

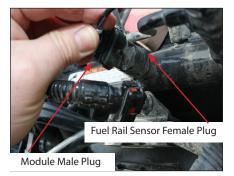



6. Plug the stock male plug into module female plug.

### **RPM INSTALLATION**

**10.** Use zip ties to secure the Rapid Power cable to the tractor wiring harness. Be sure the cable will be safe from moving parts (such as the starter/flywheel) or hot exhaust system parts. Zip tie the module box to the cable harness as shown.





Tractors	Stock	Low Power Level Total Horsepower	High Power Level Total Horsepower
Magnum 215	175 HP	~193	~210
Magnum 245	200 HP	~220	~240
Magnum 275	225 HP	~248	~270
Magnum 305	255 HP	~280	~309
Magnum 335	275 HP	~303	~330

This chart illustrates the approximate power increase when the Rapid Power Module is set at the desired power level.~ Denotes an approximate value.

#### **OPERATING INSTRUCTIONS:**


**INTERNAL POWER LEVEL SWITCH:** The Rapid Power module has three power settings, Stock, Low Power Level or High Power Level. To select different power levels remove the cover of the module box, locate the red internal power switch, and set the switch to the desired power level per illustrations below. High Power Level



Both switches in the "off" position indicates Stock performance



First switch in the "on" position indicates Low Power Level.

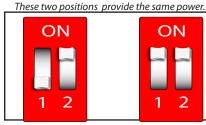

Second switch in the "on" Position indicates High Power Level.




Both switches in the "on" Position indicates High Power Level.

Be sure to securely fasten the module cover after changing the power level. Make sure the cable exits the box properly in the hole provided.

**1.** After completing the installation of the module, turn the tractor on to test if the module is working. If the tractor starts then the module is working. If the tractor does not start, check all of the connections on the install to be sure that they are secure and then attempt to start the tractor again.

2. Adjust performance setting to desired level and enjoy.

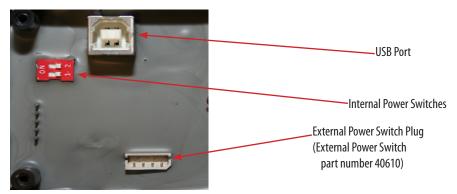

#### **INTERNET UPGRADES/UPDATE AGENT**

IMPORTANT: The information on this page is applicable to all vehicles and tractors.

**INTERNET UPDATE** The Rapid Power Module is internet updatable. To update remove cover from the module and insert a USB cable into the USB port. **Ensure that you have downloaded the Update Agent.** The Update Agent will automatically recognize the module and prompt you to update the module if an update is available. **Simply visit Bully Dog's web site www.bullydog.com/Download\_Center.php to access the Download center to obtain the latest version of the Rapid Power Module.** 



The most efficient way of keeping up to date with Bully Dog product versions is to use the Update Agent©. The Update Agent is a software program developed by Bully Dog Technologies specifically to update Bully Dog products. The Update Agent is easy to use, it can be loaded on any windows based PC running Windows 2003 or newer. The Update Agent is attainable free of charge at the Bully Dog download center or by ordering a CD ROM through a Bully Dog distributor.



## **INTERNET UPDATE**

#### USB Driver Installation (Windows XP only!)

IMPORTANT: Install the Update Agent prior to plugging in your module .

Your computer will not recognize the Module until the Driver is installed.

1) Remove cover from Rapid Power Module

2) Plug Module into PC using a USB cable (Male A end for PC, Male B end for Module: Same type of cable as used for most printers)

3) Windows will recognize the Module and attempt to install software.

4) If Windows asks if it can connect to Windows Update to search for the software select NO, not at this time. Select Next to continue.

#### 5) Select Install Automatically, then press next.



6) Windows will ask you to select the software you would like to install. Select BDT Rapid Power USB and select next.



7) Windows will warn that this driver is not signed, but select continue anyway!

Hardware Installation		
1	The software you are installing for this hardware: BDT Rapid Power USB has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.) Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.	
	Continue Anyway	

8) Allow the driver installation to complete and click FINISH

Hardware Update Wizard		
	Completing the Hardware Update Wizard	
	The wizard has finished installing the software for:	
	BDT Rapid Power USB	
	Click Finish to close the wizard.	
	< Back Finish Cancel	

9) The Update Agent should now recognize the device and allow the update to take place. This could take approximately 30 Seconds or more

Bully Dog Technologies, LLC is a team built on integrity that is dedicated to leading the vehicle performance industry with an uncompromising code of ethics demonstrated in the soundness of its employees, excellent customer service and superior products.



**Downloaders** 



**OutLook Monitor** 





# See More at: bullydog.com

### Doc.# BD40621 v1.0.0

For a full listing of Diagnostic Trouble Codes go to: www.bullydog.com/DTC.php

